



OPERATING INSTRUCTIONS

Prelude

Digital Alarm Clock



MODEL: J102

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 1 x PP3 Battery Back Up (Not Included)
- AC Mains Operation (220-240V - 50Hz)
- Wake to Alarm
- LED 'PM' & 'ALARM' Indicators
- Snooze Function
- Jumbo 1.8" 12 Hour
- Red LED Display

SPECIFICATIONS

Operating Voltage: 220-240v~ 50Hz
Backup Battery: PP3 9v (Not included)

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

DO NOT

Do not use outside or in damp conditions.

- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

DO NOT

Do not use for any purposes other than the appliances intended use.

DO NOT

Do not use if any part of this appliance is damaged in any way.

- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.





To prevent possible hearing damage, do not listen at high volume levels for long periods.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Never let children push anything into holes or slots in the cabinet or casing – this could result in an electric shock.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

DO NOT

Do not use rechargeable batteries in this appliance.

DO NOT

Do not mix old and new batteries, different types of batteries, alkaline or rechargeable batteries with different capacity together – they may leak.

- Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life alkaline batteries is recommended.
- DON'T throw the battery in fire or dispose of in household waste. Consult your local authority in the correct way to dispose of unwanted batteries.
- DON'T short-circuit the supply terminals of the batteries.
- Always check the correct polarity when inserting batteries. Incorrect polarity can damage this unit.



LOCATION OF CONTROLS



A – Alarm SET Button

This activates the alarm so that when the pre-set time is reached, the alarm will sound.

B – Snooze Button

This will temporarily silence the alarm for 9 minutes, allowing for extra sleep.

C – Hour Button

This sets the hour digits for the clock time and the alarm setting time.

D – Minute Button

This sets the minute digits for the clock time and the alarm setting time .

E – ALM/LOCK/TIME switch

This switches between setting the alarm time or the clock time. Switching to the lock setting will save the clock and alarm times.

F – Hi/Low Dimmer switch

Switching between 'hi' and 'Low' sets the brightness of the LCD display based on personal preference.

G – Jumbo 1.8" 12 Hour Red LED Display

This allows visibility in either light or dark environments.

H – Battery Compartment

Requires 1 x 9v P3 battery (Not Included).

I – AM/PM Indicator

During the afternoon/evening (PM), this indicator light will illuminate.



OPERATION

■ BEFORE FIRST USE

Plug into a suitable 220-240v~50Hz mains socket. The entire display will flash to indicate the incorrect time is being displayed. This is perfectly normal and will stop once the time has been set.

■ SETTING THE CLOCK TIME

1 SWITCH the **ALM/LOCK/TIME** switch to 'Time'.

2 PRESS the 'Hour' or 'Minute' buttons **REPEATEDLY** to change the hour and minute settings until the correct time has been set.

3 Once the time is set, **SWITCH** the **ALM/LOCK/TIME** switch back to '**LOCK**' in order to save the time.

Note: ensure that the time is set to AM or PM. PM is indicated by a red dot in the upper left corner of the display.

■ SETTING THE ALARM

1 SWITCH the **ALM/LOCK/TIME** switch to 'ALM'.

2 PRESS the 'Hour' or 'Minute' buttons **REPEATEDLY** to change the hour and minute settings until the desired alarm time has been set.

3 Once the time is set, **SWITCH** the **ALM/LOCK/TIME** switch back to '**LOCK**' in order to save the alarm time.

4 The **AL** indicator will **ILLUMINATE** to show that the alarm has been **SET**.

5 TOGGLE the **ALARM SET SWITCH** to '**ON**' to **ACTIVATE** the alarm. Once the set time is reached, the alarm will sound.

6 TOGGLE the **ALARM SET SWITCH** to '**OFF**' to **DEACTIVATE** the alarm.

Note: ensure that the time is set to AM or PM. PM is indicated by a red dot in the upper left corner of the display.

■ SNOOZE

When the alarm sounds, pressing the 'Snooze' button will temporarily silence the alarm for 9 minutes, after which the alarm will sound again. This can be repeated as often as you like for up to 2 hours. Switching the Alarm set switch to 'off' will disable the alarm and the snooze setting.

■ BATTERY BACKUP (BATTERY NOT INCLUDED)

In the event of a power failure, this unit will automatically switch to a battery standby circuit (if a 9v PP3 battery has been inserted). Open the battery compartment and insert 1 x 9v PP3 battery (Not Included). The clock will continue to run under battery operation and the alarm will still sound at the pre-set time. However, the clock display will not be visible. This is to conserve battery power.

Note: The battery should be replaced once a year.



CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

■ CLEANING

The exterior surface of the appliance should be wiped with a clean dry cloth only.

DO NOT

Do not use abrasive cleaners, solvents or polish on any part of this appliance.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL


The battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.



UK PLUG REWIRING

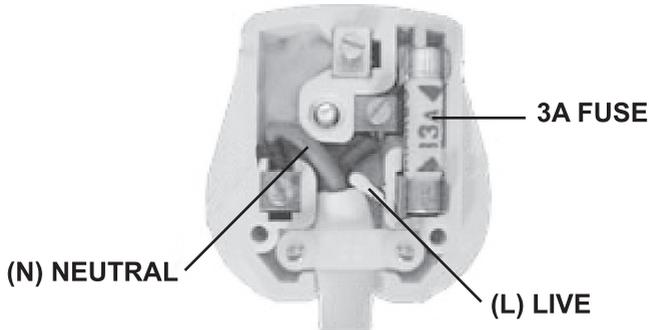

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

| | |
|--------|-------------|
| BLUE: | NEUTRAL (N) |
| BROWN: | LIVE (L) |

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



 **LLOYTRON® CUSTOMER SERVICES**

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Lloytron products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86