



OPERATING INSTRUCTIONS

'Bolero'

AM/FM

Alarm Clock Radio



MODEL: J2005WH

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- 0.6" Red LED Display
- AM/FM Wavebands
- 12hr Clock
- Radio Tuning Display
- Wake to Alarm or Radio
- Snooze & Sleep Function
- Mains Operation with Battery Backup (Battery not included)



SPECIFICATIONS

Operating Voltage:	220-240v~ 50Hz
Backup Battery:	PP3 9v (Not included)
Frequency Range:	FM 88 –108Mhz AM(MW) 540–1600Khz
Antenna:	Ferrite bar (MW), Wire Antenna (FM)



IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully.
- For Household Use only.
- Only for use indoors.
- Do not use outside or in damp conditions.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.
- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.




- To prevent possible hearing damage, do not listen at high volume levels for long periods.

- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and user maintenance shall not be made by children.
- Never let children push anything into holes or slots in the cabinet or casing – this could result in an electric shock.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Always unplug when not in use.
- Do not use rechargeable batteries in this appliance.
- Do not mix old and new batteries, different types of batteries, alkaline or rechargeable batteries with different capacity together – they may leak.
- Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life alkaline batteries is recommended.
- DON'T throw the battery in fire or dispose of in household waste. Consult your local authority in the correct way to dispose of unwanted batteries.
- DON'T short-circuit the supply terminals of the batteries.
- Always check the correct polarity when inserting batteries. Incorrect polarity can damage this unit.

LOCATION OF CONTROLS

- | | |
|---------------------|-----------------------------------|
| 1. Sleep Button | 9. Volume Control |
| 2. Minute Button | 10. Function Switch (ON/OFF/AUTO) |
| 3. Hour Button | 11. Snooze Button |
| 4. Time Set Button | 12. Tuning Control |
| 5. Alarm Set Button | 13. AM/FM Band Selector |
| 6. Speaker | 14. FM Cable Antenna |
| 7. LED Display | 15. Power Cord |
| 8. Tuning Scale | 16. Battery Compartment |

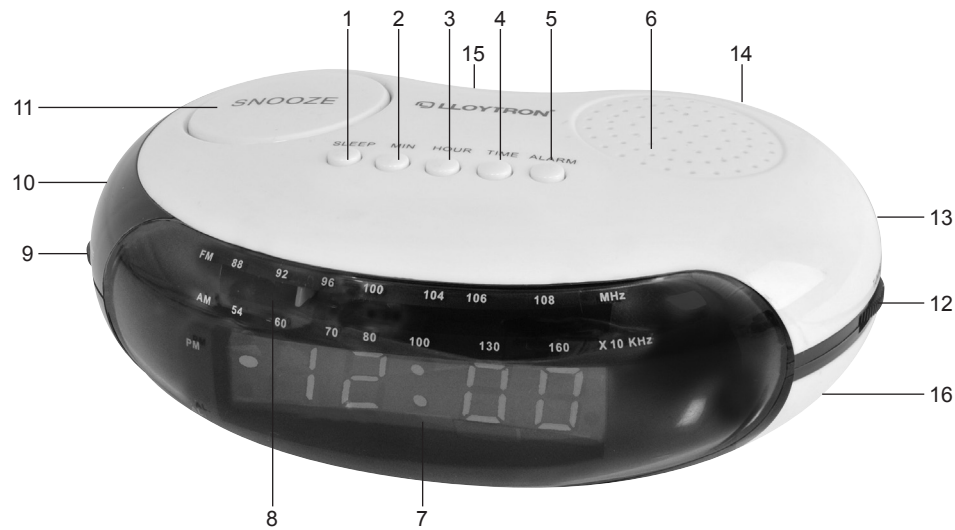

OPERATION

LISTEN TO THE RADIO

Slide the Function Switch to ON position and rotate the Volume Control to turn on the radio. Adjust the Volume Control to the desired listening level and select your favorite station with the Tuning Control and Band Selector. To turn off the radio, slide the Function Switch to OFF position. Loosen the cable antenna and adjust the direction to get the best reception if the radio could not get a clear station.

TIME SETTING

Press and hold the Time Set Button and then press the Hour or Minute Button for hour and minute adjustment of the time. Please make sure setting time is AM or PM has indication (A dot will light in the left upper corner indicating that the time is the PM range if your unit is 12 hour version type.)

WAKE TO MUSIC

Press and hold the Alarm Set Button and then press Hour or Minute button to set the desired wake up time. Release the Alarm Set Button to show the current time. Repeat the steps of "LISTEN TO RADIO" to your desired station and listening level. Slide the Function Switch to AUTO position. The Alarm Indicator will on. The radio will play your desired station and listening level automatically at the preset alarm time. Push the Function Switch to OFF position to turn off the radio alarm.

WAKE TO BUZZER

Same operation as "WAKE TO MUSIC" to adjust the alarm time, and then rotate the Volume Control clockwise until a clicking sound is heard. You will be awakened by the buzzer alarm. Push the Function Switch to OFF position to turn off the buzzer alarm.

SNOOZE FUNCTION

When you want a few extra minutes of sleep after the alarm wakes you, press the Snooze Button, the music or buzzer alarm will be off and turn on again in approximately 9 minutes. Push the Function Switch to OFF to turn off the snooze function.

SLEEP TO MUSIC

1. Slide the Function Switch to the position either OFF or AUTO. Press the Sleep Button once and you will have 59 minutes listen to the radio (the default setting).
2. If you want to increase or reduce the automatic shut off time, hold down the Sleep button and press Hour or Minute to adjust as required. The maximum sleep time is 1 hour and 59 minutes.

TO GO TO SLEEP AND WAKE TO MUSIC

Repeat the steps of "WAKE TO MUSIC", press Sleep Button to set for desired time of radio playing before sleep. The radio will stop as your setting of sleep time automatically and will play again at your preset wake up time.

BATTERY BACKUP

Insert a 9 Volt battery in the battery compartment. Should there be a power failure, the clock will continue to function. You will not see this however because the battery does not illuminate the clock display. When the electric power turns on again, the display will indicate the correct time. For clarity alarm clock does not work on battery. Replace the battery once a year.

CLEANING AND CARE

MAINTENANCE:

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

CLEANING:

The exterior surface of the appliance should be wiped with a clean dry cloth only.

DO NOT USE ABRASIVE CLEANERS, SOLVENTS OR POLISH ON ANY PART OF THIS APPLIANCE.


WEEE/ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

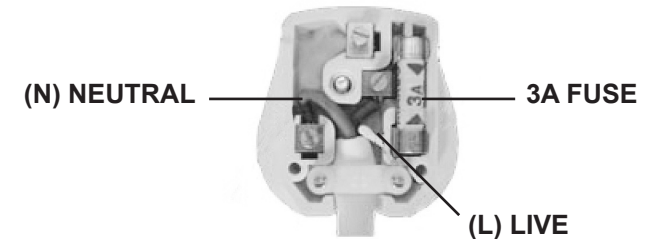

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

call: 08454 81 8808

email: customerservice@lloytron.com

web: www.lloytronhelpdesk.com

To find more details on a wide range of Lloytron products please visit our website at **www.lloytron.com**
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K