

---

OPERATING INSTRUCTIONS

---

# Citrus Fruit Juicing Press



---

MODEL: K3101

---

# thank you

Thank you for the purchase of this quality **HEALTH KICK** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference. Remove all packaging before use.

---

## FEATURES

---

- Easy Clean Premium Food Grade 304 Stainless Steel Cabinet
- 130w powerful long-life copper motor
- Stainless Steel Strainer and Cone
- Long Lever Aluminium Handle
- Non-drip function
- 300ml Juicing Jug
- Antiskid silicone feet
- Dishwasher Safe
- Includes:
  - FREE Beginners Food, Health and Nutrition Guide
  - FREE Nutritional Juicing Recipe Book



---

## SPECIFICATIONS

---

Operating Voltage: 220-240v~ 50/60Hz

Wattage: 130w

---

# IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

## SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.

### DO NOT

- Do not use outside or in damp conditions.
- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.
- Do not leave unattended when in use.
- Do not clean with metal scouring pads. Pieces of the pads can break off and touch electrical parts involving a risk of electric shock.

---

## LOCATION OF CONTROLS

---

A - Motor Base Unit

B - Pressure Lever

C - Cone Cap

D - Squeezing Cone

E - Strainer / Sieve

F - Juice container

G - Juice outlet

Suitable for use with any British Standard  
220-240v~50Hz mains supply.



---

## OPERATION

---

### ■ BEFORE FIRST USE



Ensure that the unit is assembled correctly before use and that the juice jug is underneath the spout.



Push Spout downwards to ensure that juice flows into the jug.  
Lift Spout upwards to prevent the flow and prevent the juice from dripping.

**⚠ CAUTION**

Do not use continuously for more than 60 seconds. Pause for 15 seconds before reusing.

**■ HOW TO USE**



1. Assemble the unit as shown.
2. Plug into mains outlet socket
3. Prepare the citrus fruits by washing and cutting into half. Only for Citrus Fruit such as Lemons, Limes, Grapefruit, Oranges, Citron etc
4. Lift the handle and carefully place the citrus fruit onto the cone.
5. Lower the handle and press down on the handle. This will operate the motor unit and squeeze the juice from the citrus fruit.
6. Always use one hand on the handle and one hand to keep the motor unit steady. You do not need large amounts of pressure, since the long handle reduces the amount of pressure required.
7. The motor unit will change direction each time it is operated.
8. The sieve will stop large tendons of fruit from entering the jug.
9. After use, separate each section and clean each part.

---

## CLEANING AND CARE

---

Always unplug from supply before cleaning.

Separate each part carefully.

The Cone Cap twists off the handle lever.

The Juicing Cone pulls off the shaft.

The sieve and juice container simply lift off the shaft once the cone has been removed.

All these parts can be placed in the dishwasher or cleaned in the sink.

The main body should be cleaned with a damp soft cloth only.



### DO NOT

- Do not submerge the motor unit in water.
- Do not use harsh abrasives, wire wool, or abrasive pads when cleaning any parts of this unit.

---

## WEEE/ENVIRONMENTAL PROTECTION

---




### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

---

## FITTING A NEW UK PLUG

---

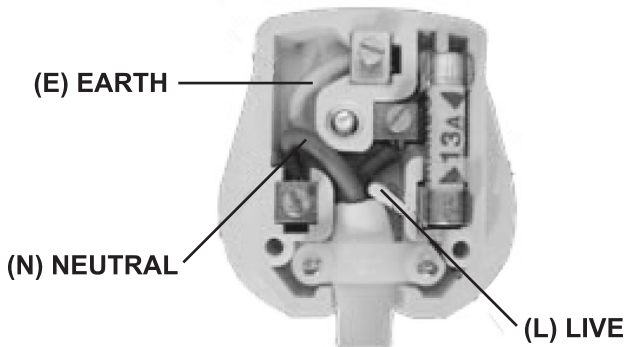


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

### ■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.  
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.  
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

### ■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

---

 healthkick **CUSTOMER SERVICES**

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)

To find out more about Health Kick products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Plc, Laltex House, Leigh, England WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86