

OPERATING INSTRUCTIONS

Digital Fruit & Veg Juice Extractor



MODEL: K3152

thank you

Thank you for the purchase of this quality **HEALTH KICK** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference. Remove all packaging before use.

FEATURES

- Digital LCD Display
- · Easy Clean Premium Food Grade 304 Stainless Steel Cabinet
- 800w powerful long-life copper motor
- Large 85mm diameter full apple feeding tube
- 5 speeds for hard and soft fruit & vegetables
- 1.1ltr dishwasher safer juice jug
- · 2ltr easy clean pulp waste container
- 1x cleaning brush
- Non-drip function
- Dishwasher Safe
- Antiskid silicone feet
- Includes:
- FREE Nutritional Juicing Recipe Book

SPECIFICATIONS

Operating Voltage: 220-240v~ 50/60Hz Wattage: 800w

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- · Keep away from hot surfaces, such as gas or electric hobs and ovens etc
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- Always unplug when not in use.

- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with this appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

• Keep the appliance and its cord out of reach of children less than 8 years.


O DO NOT

- Do not use outside or in damp conditions.
- Do not use for any purposes other than the appliances intended use.
- Do not use if any part of this appliance is damaged in any way.
- Do not leave unattended when in use.
- Do not clean with metal scouring pads. Pieces of the pads can break off and touch electrical parts involving a risk of electric shock.
- Do not use if the centrifugal sieve bowl has been damaged or torn.
- Do not use for more than 3 minutes continuous use. Then allow to cool down for 7 minutes before using again.
- Never use fingers, kitchen utensils or similar to push ingredients down the feeding tube. Use the supplied Food Plunger only.
- Never stick fingers or other objects into the spout.
- Never touch the moving parts of the appliance until it has come to a complete stop.
- The centrifugal sieve bowl must be handled with care, as it contains sharp parts.

LOCATION OF CONTROLS

- 1. Food Plunger
- 2. Transparent Cover
- 3. Centrifuge Sieve Bowl
- 4. Juice Collection Tray
- 5. Locking Mechanism
- 6. Pulp Waste Container
- 7. Rotor/Spindle
- 8. Motor Unit
- 9. Juice Jug

Suitable for use with any British Standard 220-240v~50Hz mains supply.

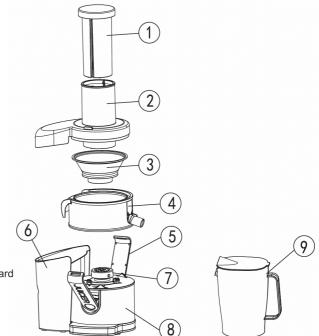

ASSEMBLY

BEFORE FIRST USE

Ensure that the unit is fully assembled correctly before use and that the juice jug and pulp container are in place before operation.

ASSEMBLY BEFORE USE

1. Place the Motor Unit (8) on a flat surface, eg kitchen counter, and make sure it is standing firmly on the four suckers underneath.

- 2. Place the Juice Collection Tray (4) onto the Motor Unit.
- 3. Carefully push the sieve (3) onto the rotor/spindle (7) ensuring it is down fully and not damaged.


O DO NOT

Do not use sieve if damaged.

4. Add the transparent cover (2) and lock into place.

5. Place the Pulp Container, Juice Jug and Food Plunger in place.

OPERATION

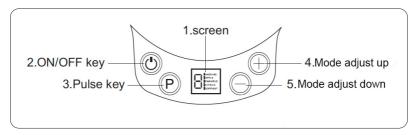

- **1.** Connect to the power supply.
- 2. The screen will show 3 as the default speed. The number and description will flicker at the same time.
- **3.** Depending on the hardness of the fruit or vegetables press the Mode (+) or (-) Key to move the menu up or down on the display.
 - 1 is the slowest speed and for soft fruits, 5 is for hard vegetables.

Mode Setting	Desciption	Speed (rpm)
1	Soft Fruits	13000
2	Citrus	14000
3	Pineapple	15000
4	Apple	16000
5	Hard Vegetables	17000

4. Once you have selected the right Mode for the correct fruit or vegetable, then press ON/OFF Key again will start the Juicer.

5. Feed the selected fruits/vegetables into the Juicer through the feeding tube a little at a time, pushing them down gently with the Food Plunger (1).

◎ DO NOT	
Do not force of press too hard on the plunger as this may damage the siev	/e

Long vegetables such as carrots should be fed into the funnel pointy end first.

Press the fruits/vegetables gently into the funnel. Too much pressure reduces the amount of juice extracted and can damage the appliance.

Stop the appliance before removing the food plunger to add more ingredients to avoid splashes.

6. Juice will be separated from the pulp, which will be collected into the respective containers.

- 7. Once finished, press on/off button again to stop the Juicer.
- **8.** Unplug and remove the Juice.

Keep an eye on both the pulp container and the Juicing Jug to ensure they do not become too full.

Do not use continuously for more than 3 minutes. Pause for 7 minutes before reusing to allow the motor unit to cool down and to avoid overheating.

CLEANING AND CARE

Always unplug from supply before cleaning.

Separate each part carefully.

Lower the locking mechanism to horizontal position start separation.

Remove the Food Plunger and the lid.

Remove and empty the Pulp Waste Container.

Carefully lift the centrifugal sieve bowl from the motor unit.

The Sieve contains sharp blades, care should be taken.

The Juice Collection Tray can then be easily lifted away.

All these parts can be placed in the dishwasher or cleaned in the sink.

The main motor body should be cleaned with a damp soft cloth only.

O DO NOT

• Do not submerge the motor unit in water.

• Do not use harsh abrasives, wire wool, or abrasive pads when cleaning any parts of this unit.

WEEE/ENVIRONMENTAL PROTECTION



DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

(f) healthkick CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Health Kick products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86