



---

OPERATING INSTRUCTIONS

---

Modus

# Swing-Arm Hobby/ Desk Lamp



---

MODEL: L1120

---

# thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

- Versatile Pivoting & Swivelling Head.
- In-line On/Off Switch.
- Bulb: E27 GLS bulb 10w LED or 45w Halogen bulb (Bulbs Not Included).
- Weighted Base and Table Clamp Included.
- Max. Reach: 74cm (Approx).



---

## SPECIFICATIONS

---

Operating Voltage: 220-240v~ 50Hz.

Bulb: E27 GLS bulb 10w LED or 45w Halogen bulb (Bulbs Not Included).

---

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

### SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.

**DO NOT**

Do not use outside or in damp conditions.



- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.

**DO NOT**

Do not use for any purposes other than the appliances intended use.

- This Lamp is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

**DO NOT**

Do not use this Lamp if damaged.

- Any plastic protective cover on the shade must be removed prior to use.
- Always unplug when not in use.
- To prevent against the risk of electric shock, Do not submerge any part of the appliance in water.
- This lamp should only be used on a flat surface.
- This lamp is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this Lamp.
- Cleaning and user maintenance shall not be made by children.

**DO NOT**

Do not use a bulb of lower voltage than that rated.

- When using low energy bulbs, always ensure the highest equivalent wattage is less than that recommended.
- Should you need to replace a bulb, allow sufficient time for the bulb and lampshade assembly to cool before proceeding to do so.
- Never touch the bare bulb with your bare fingers or hands.
- Grease or oil from fingers can damage the bulb and cause the bulb to burn out, or drastically reduce its operating life.
- Instead, always use a soft cloth or facial tissue when handling the bulb.
- If grease or dirt is seen to get onto the bulb, carefully wipe clean with a lint-free cloth moistened with methylated spirit whilst the lamp is unplugged.

---

## MINIMUM DISTANCES - LAMP TO OTHER SURFACES

---

**KEEP THE MINIMUM DISTANCE FROM ANY OBJECT - WHEN ILLUMINATED - TO AT LEAST**



---

# LOCATION OF CONTROLS

---



## **A – Weighted Base**

Place the base on a flat, stable surface to ensure that the lamp does not fall over.

## **B – Neck & Stem**

The neck and stem can be manipulated into a variety of positions.

## **C – Locking screws**

The locking screws located on the neck and stem allow users to lock the lamp into the desired position.

## **D– Lamp holder**

The lamp holder is the part of the lamp that holds the bulb (not included) into place.

## **E – Lamp shade**

The lamp shade is designed to help radiate the light into the direction the lamp is facing.

## **F – Table Clamp**

This model comes with an optional table clamp included. This gives the user the option of using the weighted base or the clamp for different scenarios.



---

## ASSEMBLY & OPERATION

---



**1 POSITION** the weighted base onto a **FLAT, STABLE** surface. Alternatively, **CLAMP** the table clamp onto a **SUITABLE FIXTURE** such as a shelf or table and **TIGHTEN** the screw to **LOCK** it into place.




**2 INSERT** the bottom of the neck & stem into the joint on the base. The bottom part of the neck and stem has a small hole. **ENSURE** this is **ALIGNED** with the **SCREW** on the joint. Proceed to **TIGHTEN** the screw to **LOCK** it into place.



**3 LOOSEN** the locking screws and **MANIPULATE** the neck and stem into a **SUITABLE POSITION**. Once the suitable position is set, tighten the locking screws to lock it into that position.



**4 ATTACH** the lamp shade by **ALIGNING** the indents on the shade with the indents on the lamp holder. **TURN** the shade **CLOCKWISE** to **LOCK** it into position.

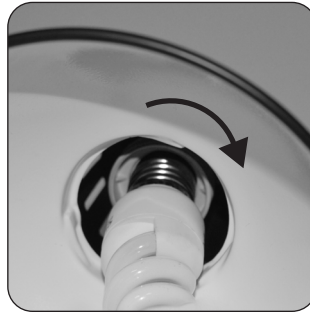

**5 SCREW** on 1 x E27 45w max. Halogen GLS or 10w energy saver (bulb not included).

**Note:** Be careful not to force the neck & stem beyond their natural capabilities as this could cause damage to the product.





**6** **CONNECT** the mains cord to a **SUITABLE** 220-240v~50Hz mains supply.

**7** **USE** the in-line on/off switch to **OPERATE** the unit.

---

## WEEE/ENVIRONMENTAL PROTECTION

---



### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT


Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



---

## FITTING A NEW UK PLUG

---

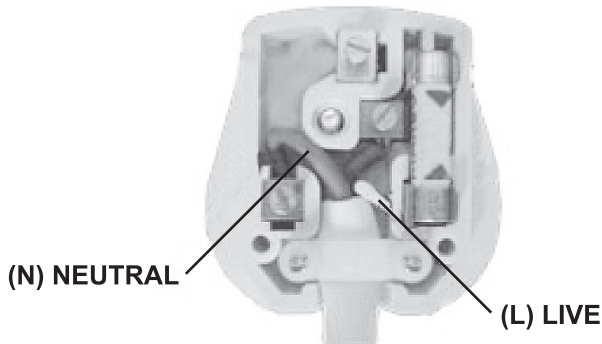

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

### ■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)  
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.  
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

### ■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug.  
Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



---

## LLOYTRON® CUSTOMER SERVICES

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)

To find out more about Lloytron products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed by Lloytron Plc, Laltex House, Leigh, England WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86