



OPERATING INSTRUCTIONS

Desk Lamp

FEATURES

- In-line On/Off Switch
 - Bulb: E27 35w Max. Halogen Candle or 9w Energy Saver (Bulb not Included)
-

SPECIFICATIONS

Operating Voltage: 220-240v~ 50Hz

Bulb: E27 35w max. Halogen Candle or 9w Energy Saver

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.
- This Lamp is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.
- Any plastic protective cover on the shade must be removed prior to use.
- Always unplug when not in use.
- To prevent against the risk of electric shock, Do not submerge any part of the appliance in water.
- This lamp should only be used on a flat surface.
- This lamp is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this Lamp.

- Cleaning and user maintenance shall not be made by children.
- When using low energy bulbs, always ensure the highest equivalent wattage is less than that recommended.
- Should you need to replace a bulb, allow sufficient time for the bulb and lampshade assembly to cool before proceeding to do so.
- Never touch the bare bulb with your bare fingers or hands.
- Grease or oil from fingers can damage the bulb and cause the bulb to burn out, or drastically reduce its operating life.
- Instead, always use a soft cloth or facial tissue when handling the bulb.
- If grease or dirt is seen to get onto the bulb, carefully wipe clean with a lint-free cloth moistened with methylated spirit whilst the lamp is unplugged.

DO NOT

- Do not use for any purposes other than the appliances intended use.
- Do not use outside or in damp conditions.
- Do not use this Lamp if damaged.
- Do not use a bulb of lower voltage than that rated.

MINIMUM DISTANCES - LAMP TO OTHER SURFACES

**KEEP THE MINIMUM DISTANCE
FROM ANY OBJECT - WHEN
ILLUMINATED - TO AT LEAST**



HOW TO USE

1. Screw in one E27 35w (max) halogen candle bulb or 9w energy saver bulb.
2. Plug into any household AC mains outlet.
3. Operate via integral on/off switch.


WEEE/ENVIRONMENTAL PROTECTION



DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

UK PLUG REWIRING

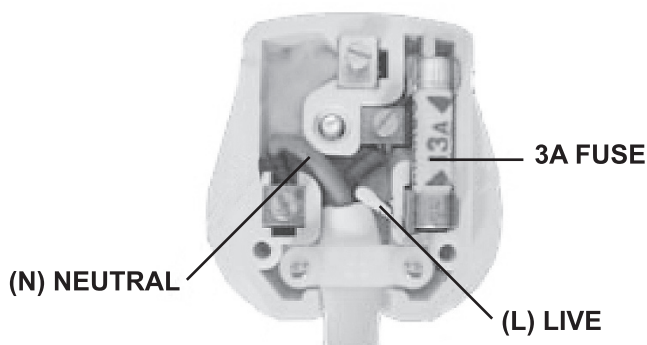

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG


Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



The luminaire is compatible with bulbs of the energy classes:

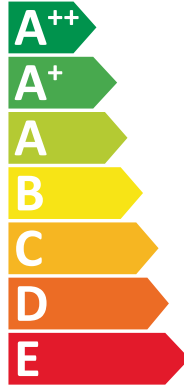

 LLOYTRON®

874/2012

LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Lloytron products, visit www.lloytron.com

WARRANTY

An additional manufacturer's warranty is not provided with this product. If the product develops a manufacturing fault in any way, then under Statutory Rights you must stop use and return it to the retailer in which it was purchased.



Distributed by Lloytron Plc, Laltex House, Leigh, England WN7 3XH