

 **LLOYTRON®**

Model
L855AB / L855BC / L855BH

Studio Poise Swing-Arm Hobby / Desk Lamp



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, please call our Customer Service Department
customerservice@lloytron.com • Tel: 08454 81 8808
www.lloytronhelpdesk.com

For details of other great products please visit
www.lloytron.com


Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire U.K. WN7 3XH

OPERATING
INSTRUCTIONS

Thank you for the purchase of this quality LLOYTRON product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- *Versatile Pivoting & Swivelling Head (A)*
- *Adjustable Reach Arm (B)*
- *In-line On / Off Switch*
- *Bulb: Max. 35w GU10 Bulb (Included)*
- *Height: 54cm approx*
- *Max. Reach: 47cm approx.*

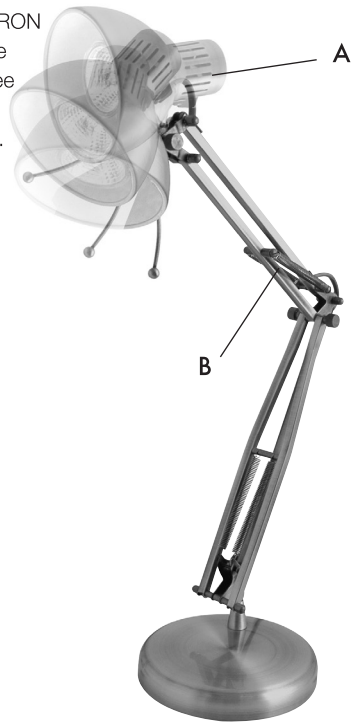

IMPORTANT SAFEGUARDS AND PRECAUTIONS



SAVE THESE INSTRUCTIONS

- Read all instructions carefully.
- For household use only. Not intended for commercial use.
- Only for use indoors. Do not use outside, in damp/wet conditions or in bathrooms.
- Before plugging into the mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Do not use for any purposes other than the appliances' intended use.
- This Lamp is not intended to be operated by means of an external timer or separate remote control system.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

- Do not use this Lamp if damaged.
- Always unplug when not in use.
- To prevent against the risk of electric shock, do not submerge any part of the appliance in water.
- This lamp should only be used on a flat surface.
- This lamp is not intended for use by persons with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this Lamp.
- Cleaning and user maintenance should not be made by children.
- Do not use a bulb of lower voltage than that rated.
- When using low energy bulbs, always ensure the highest equivalent wattage is less than that recommended.
- Should you need to replace a bulb, allow sufficient time for the bulb and lampshade assembly to cool before proceeding to do so.
- Never touch the bare bulb with your bare fingers or hands.
- Grease or oil from fingers can damage the bulb and cause the bulb to burn out, or drastically reduce its operating life. Instead, always use a soft cloth or facial tissue when handling the bulb.
- If grease or dirt is seen to get onto the bulb, carefully wipe clean with a lint-free cloth moistened with methylated spirit whilst the lamp is unplugged.

MINIMUM DISTANCES - LAMP TO OTHER SURFACES



OPERATION

1. Screw on one GU10 35w (Max) Halogen Bulb
2. Plug into any household AC Mains Outlet
3. Operate via integral On/Off Switch

SPECIFICATIONS

Operating Voltage: 220-240v~ 50Hz
Wattage: 35w Maximum
Bulb: GU10


WEEE / ENVIRONMENTAL PROTECTION



Disposal of Electrical and Electronic Equipment
Do not dispose of this product with household waste.
For the proper treatment, recovery and recycling please
take this product to the appropriate waste collection point.
If you are unsure where this may be, please contact your
local authority.
Improper disposal may be harmful to the environment.

UK PLUG REWIRING

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

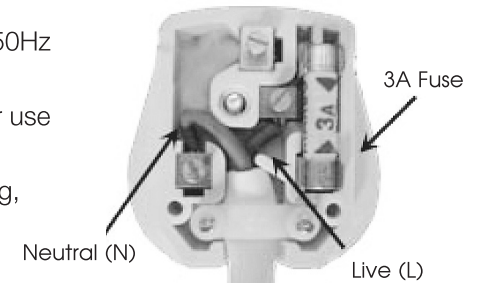

IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:
BLUE: NEUTRAL (N)
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.

The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.