

FOR EASY LIVING  
**homelife**<sup>®</sup>

---

OPERATING INSTRUCTIONS

---

# Swing Poise Hobby Desk Lamp



---

MODEL: L945

---

# thank you

Thank you for the purchase of this quality **HOMELIFE** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

---

## FEATURES

---

- Weighted Base with Desk Tidy.
- Versatile Lamp Head Tilt & Swivel.
- Adjustable Reach Arm.
- In-Line On/Off.
- Bulb: E14 9w LED Candle Bulb (Bulb Not Included)
- Height: 52cm (approx.)
- Height: 35cm (approx.)



---

## TECHNICAL SPECIFICATIONS

---

Rated Voltage:	220-240V ~ 50Hz
Bulb Wattage:	9W max (LED), 35W max (Halogen)
Bulb Type:	Candle E14 / SES (Small Screw Cap)

**Note:** *Bub not included with this lamp. Do not use dimmable LED bulbs.*

Cable Length:	1m approximately
Dimensions:	58 X 16 X 16cm (approx.)
Operating Temperature:	+5C to +30C

---

# IMPORTANT SAFEGUARDS AND PRECAUTIONS

---

## SAVE THESE INSTRUCTIONS

- Read all instructions carefully and keep for future reference.
- For Household Use only. Not intended for commercial use.
- Only for use indoors.
- Do not use outside or in damp / wet conditions or in bathrooms.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- Do not use for any purposes other than the appliances intended use.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.
- Do not use this Lamp if damaged.
- Any plastic protective cover on the shade must be removed prior to use.
- Always unplug when not in use.
- To prevent against the risk of electric shock, Do not submerge any part of the appliance in water.
- This lamp should only be used on a flat surface.
- This lamp is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this Lamp.
- Cleaning and user maintenance shall not be made by children.
- Do not use a bulb of lower voltage than that rated.

### FOR HALOGEN INCANDESCENT BULBS ONLY

- When using low energy bulbs, always ensure the highest equivalent wattage is less than that recommended.
- Should you need to replace a bulb, allow sufficient time for the bulb and lampshade assembly to cool before proceeding to do so.
- Never touch the bare bulb with your bare fingers or hands.
- Grease or oil from fingers can damage the bulb and cause the bulb to burn out, or drastically reduce its operating life.
- Instead, always use a soft cloth or facial tissue when handling the bulb.
- If grease or dirt is seen to get onto the bulb, carefully wipe clean with a lint-free cloth moistened with methylated spirit whilst the lamp is unplugged.

---

## MINIMUM DISTANCES - LAMP TO OTHER SURFACES

---

**KEEP THE MINIMUM DISTANCE  
FROM ANY OBJECT - WHEN  
ILLUMINATED - TO AT LEAST**



---

## HOW TO USE

---

1. Screw on one E14 9w LED Candle Bulb (Bulb Not Included)
2. Plug into any household AC Mains Outlet
3. Operate via integral On/Off Switch

---

## WEEE/ENVIRONMENTAL PROTECTION

---




### ■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

---

## FITTING A NEW UK PLUG

---

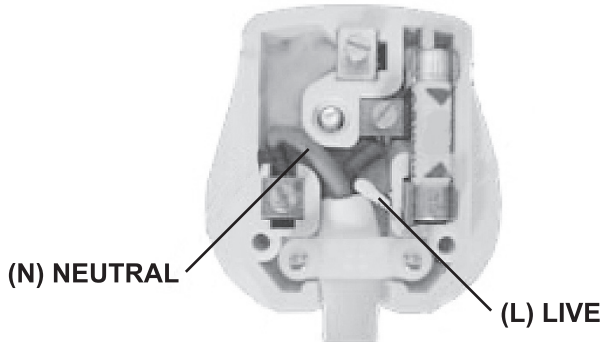

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ **IMPORTANT:**

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.  
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ **DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG**

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug.  
Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

---

FOR EASY LIVING  
**homelife**® CUSTOMER SERVICES

---

If you have any queries about this product then please contact Lloytron Customer Services online at:



**[www.lloytronhelpdesk.com](http://www.lloytronhelpdesk.com)**

To find out more about Lloytron products, visit [www.lloytron.com](http://www.lloytron.com)



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England. WN7 3XH  
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire. D02 AY86