



OPERATING INSTRUCTIONS

AM/FM Portable Radio



MODEL: N2402BK

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- AM (MW) & FM Wavebands
- 4 Individual Coloured Facia Panels: Red, Blue, Yellow & Green
- Rotary On / Off / Volume & Tuning Controls
- Telescopic Antenna
- 3.5mm Headphone Socket
- Integral Carry Handle
- Battery Operation: 4 x 'C' (Not Included)
- Mains Operation (Mains Lead Included)
- Mains Cord Storage



TECHNICAL SPECIFICATIONS

Rated Input:	220-240V ~ 50Hz 4W
Battery Alternative:	6v DC 4x 1.5V C size Alkaline Batteries
Cable Length:	1m approximately
Waveband Frequency:	FM: 88-108Mhz AM: 530 – 1600KHz
RMS Output:	1.2W
Dimensions:	22 x 13 x 6cm (approx.)
Operating Temperature:	+5C to +30C

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only.
- Only for use indoors.

DO NOT

Do not use outside or in damp conditions.

- Keep away from hot surfaces, such as gas or electric hobs and ovens etc

DO NOT

Do not use for any purposes other than the appliances intended use.

DO NOT

Do not use if any part of this appliance is damaged in any way.

- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and user maintenance shall not be made by children.
- Never let children push anything into holes or slots in the cabinet or casing – this could result in an electric shock.
- Do not use rechargeable batteries in this appliance.

DO NOT

Do not mix old and new batteries, different types of batteries, alkaline or rechargeable batteries with different capacity together – they may leak.

- Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life alkaline batteries is recommended.
- DON'T throw the battery in fire or dispose of in household waste. Consult your local authority in the correct way to dispose of unwanted batteries.
- DON'T short-circuit the supply terminals of the batteries.
- Always check the correct polarity when inserting batteries. Incorrect polarity can damage this unit.

LOCATION OF CONTROLS



A – Telescopic Antenna

This can be extended for better reception of radio signals.

B – FM/AM Selector

This toggles between FM & AM bandwidths.

C – Rotary Tuning Control

Rotating the dial will browse through radio stations.

D – Headphone Output

This allows users to use earphones or headphones for private listening.

E- 4 Individual Coloured Facia Panels

You can pick between 4 different coloured panels. These include Red, Blue, Yellow & Green

F – Speaker

This outputs audio unless the earphones are connected.

G – Rotary Volume Control

Using the dial will adjust the volume control based on personal preference. Rotating the dial all the way down will switch the unit 'off'.

H – Battery Compartment & Mains Cord Storage

Requires 2 x AA Batteries (Not Included)

BATTERY INSTALLATION

To Install Batteries:

1. Remove the Battery Compartment Door by pressing and sliding the door down.
2. Insert 4 x 1.5 Volts "C" size or equivalent batteries, observing the correct polarities as indicated in the battery compartment.
3. Replace cover.

OPERATION

1. Select the desired Waveband i.e. AM / FM, via the Band Selector Switch.
2. Switch the Radio ON by turning the ON / OFF Volume Control, as indicated by a clicking sound.
3. Tune in to the desired Radio Station by using the Tuning Control and set the Volume Control to the desired listening level.
4. To switch the Radio OFF, turn the ON / OFF Volume Control until you hear it click 'OFF'.

■ EARPHONE

To enjoy your radio in privacy, use the supplied earphone. Plug the 1/8-inch (3.5mm) earphone into the radio's EAR jack. This automatically disconnects the built-in speaker.

■ LISTENING SAFETY

To protect your hearing, follow these guidelines when you use the earphone:

- Set the volume to the lowest setting before you begin listening. After you begin listening, adjust the volume to a comfortable level.
- Do not listen at extremely high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.

■ TRAFFIC SAFETY

Do not wear the earphone while operating a motor vehicle or riding a bicycle. This can cause a traffic hazard and is illegal in some areas. Even though some earphones are designed to let you hear outside sounds when listening at normal volume level, they still present a traffic hazard.

■ ANTENNA

Your radio is equipped with a built-in ferrite bar aerial for improved AM reception and a telescopic rod antenna for improved FM reception. As the built in ferrite bar aerial is directional, rotate the radio slowly to find the position, which gives optimum reception on AM. When listening to FM broadcasts, extend the telescopic rod aerial to its full length, for best reception and clarity.

■ FACIA PANEL

This radio comes with a selection of four coloured facia panels. When you have selected the colour of your choice, simply click into place. Please select carefully, as the panels are not designed to be removed once fitted.

■ AC POWER

You can power your radio from standard AC power using the AC power cord. Plug power cord into the unit AC socket and then plug the radio's power cord into a standard AC outlet.

IMPORTANT

- Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life Alkaline batteries is recommended.

CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

■ CLEANING

The exterior surface of the appliance should be wiped with a clean dry cloth only.

DO NOT

Do not use abrasive cleaners, solvents or polish on any part of this appliance.

WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.

LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Lloytron products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England. WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire. D02 AY86