



OPERATING INSTRUCTIONS

Romeo

AM/FM Portable Radio



MODEL: N2407RD

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

To find more details on a wide range of Lloytron products please visit our website at www.lloytron.com
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- AM & FM Wavebands
- Rotary Tuning & Volume Dials
- Auxiliary Input (3.5mm auxiliary cable included)
- Headphone Output (headphones not included)
- Telescopic Antenna
- Carry Handle
- Mains or Battery Operation (requires 4x 'AA' batteries - not included)



SPECIFICATIONS

- Operating Voltage: 220-240v~50Hz
- Battery Specification: 4 x 1.5v 'AA' Batteries (Not Included)

IMPORTANT SAFEGUARDS AND PRECAUTIONS

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only.
- Only for use indoors.

DO NOT

Do not use outside or in damp conditions.



- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.

⊘ DO NOT

Do not use for any purposes other than the appliances intended use.

⊘ DO NOT

Do not use if any part of this appliance is damaged in any way.

- To prevent against the risk of electric shock, do not submerge any part of this appliance in water, unless advised in this manual.
- This appliance should only be used on a flat surface.



• To prevent possible hearing damage, do not listen at high volume levels for long periods.

- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and user maintenance shall not be made by children.
- Never let children push anything into holes or slots in the cabinet or casing – this could result in an electric shock.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Always unplug when not in use.

⊘ DO NOT

Do not use rechargeable batteries in this appliance.

⊘ DO NOT

Do not mix old and new batteries, different types of batteries, alkaline or rechargeable batteries with different capacity together – they may leak.

- Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life alkaline batteries is recommended.
- DON'T throw the battery in fire or dispose of in household waste. Consult your local authority in the correct way to dispose of unwanted batteries.
- DON'T short-circuit the supply terminals of the batteries.
- Always check the correct polarity when inserting batteries. Incorrect polarity can damage this unit.



LOCATION OF CONTROLS



A – Battery Compartment

Open the battery compartment door to insert 4 x 1.5v 'AA' batteries (not included.)

B – AC Socket

Connect the AC plug to the socket to operate via the mains power cord. Connect the mains power cord to a suitable 220-240v~50Hz mains supply.

C – Telescopic Antenna

The antenna is used to receive radio waves transmitted by radio stations. Extend the antenna fully for a better reception.

D – AM/FM Tuning Dial

The tuning dial indicates what frequency is being received by the radio.

E – Rotary Tuning Control

Use the rotary tuning control to move the dial along to locate a station of your choice.

F – Band Selector Switch

Use the function switch to select between AM & FM radio bandwidths.

G – Rotary Volume Control

Use the rotary volume control to increase or decrease the volume accordingly. Exercise caution when listening at high volumes for long periods of time, as it could cause hearing damage.

H – Speaker

The speaker outputs the audio from the cassette or radio sources.

I – Auxiliary input

Use the 3.5mm auxiliary cable included to connect an external source (mobile phone, tablet etc.) to use the radio's speaker to output the audio from that source.

J – Headphone Output

Connect a pair of headphones or earphones using the 3.5mm headphone output for private listening.



OPERATION

This radio can be operated by mains power supply or battery operation (batteries not included).

■ MAINS POWER

Plug the power cord into the AC Input and then plug the 3 pin plug into a suitable 220-240v~50Hz mains supply.

■ BATTERY OPERATION

1 REMOVE the battery compartment door.

2 INSERT 4 x 1.5v 'AA' batteries (Not Included), observing the **CORRECT POLARITIES** as indicated in the battery compartment.

3 REPLACE the battery compartment door, **ENSURING** that it **CLICKS SECURELY** into place.

 
IMPORTANT

- Always turn the unit off when not in use. Leaving it on will shorten the life of the batteries
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion and damage the unit.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible
- The use of long life alkaline batteries is recommended.

■ RADIO OPERATION



1 TURN the volume control **ANTI-CLOCKWISE** fully before use to ensure the power is switched off. This will also **PROTECT** against hearing damage as the volume can be gradually increased to a comfortable level.

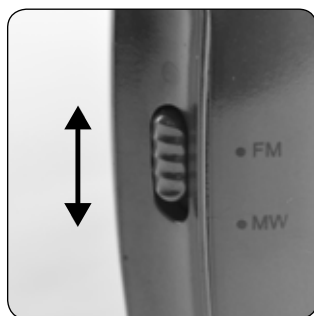


2 TOGGLE between AM & FM on the band selector switch to **CHOOSE** between AM or FM wavebands.



 3 SLOWLY turn the volume control dial **CLOCKWISE** to switch the radio on. The dial will **CLICK** to notify the user that the power is on. Keep rotating the dial clockwise to find a suitable listening volume.




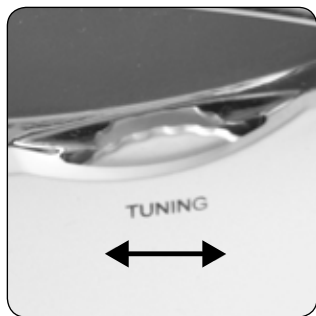

4 USE the tuning control to **BROWSE** through the frequencies within AM or FM wavebands to find a suitable radio station to listen to. Use the AM/FM tuning dial to check the frequency.



 5 **EXTEND** the telescopic antenna to help **IMPROVE** reception.

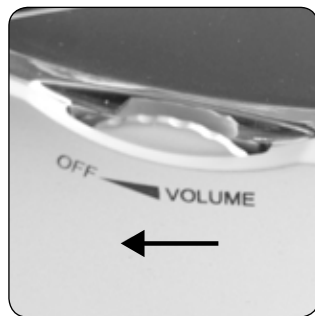

6 After use, **SWITCH** the radio **OFF** by turning the volume control dial **ANTI-CLOCKWISE** fully until it **CLICKS**.

■ HEADPHONES

This radio can be used with headphones (Not Supplied) for private listening. Plug a 3.5mm headphone jack into headphone output. This will automatically disconnect the built in speaker. To use the built in speaker again, simply remove the 3.5mm headphone cable from the headphone output.

■ AUX INPUT

By plugging external sources into the 3.5mm auxiliary input, it is possible to use the built in speaker to output those sources. This will automatically disconnect the radio reception. To use the radio again, simply remove the 3.5mm cable from the auxiliary input.

■ LISTENING SAFETY

To protect your hearing, follow these guidelines when using headphones:

- Set the volume to the lowest setting before you begin listening and then then adjust the volume to a comfortable level
- Do not listen at extremely high volume levels. Extended periods of listening at high volumes can lead to permanent hearing loss.
- Once the volume is set to a comfortable level, do not increase it. Over time, your ears adapt to the volume level, so even a volume that does not cause discomfort may still damage your hearing.

■ TRAFFIC SAFETY

Do not wear headphones or use the product while operating a motor vehicle or when riding a bicycle. This can cause a traffic hazard and may be illegal in some areas. Even though some headphones or earphones may be designed to let in outside noise when listening at a normal volume level, they still present a hazard.

■ ANTENNA

This radio is equipped with a built in telescopic rod antenna for improved FM reception. When listening to FM broadcasts, extend the telescopic rod aerial to its full length, for best reception and clarity.



CLEANING AND CARE

■ MAINTENANCE

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

 
■ CLEANING

The exterior surface of the appliance should be wiped with a clean dry cloth only.

⊘ DO NOT

Do not use abrasive cleaners, solvents or polish on any part of the appliance.

UK PLUG REWIRING

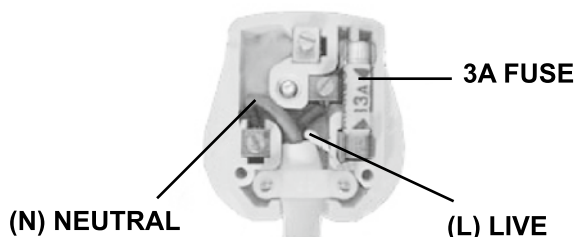

Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use by simply plugging into AC Mains. Should you need to change or refit a plug, proceed as follows: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE: NEUTRAL (N)
BROWN: LIVE (L)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.



WEEE/ENVIRONMENTAL PROTECTION



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.



LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product, there are three ways to contact our customer service department:

 **08454 81 8808**

 **customerservice@lloytron.com**

 **www.lloytronhelpdesk.com**

To find more details on a wide range of Lloytron products please visit our website at www.lloytron.com
Lloytron plc, Laltex House, Leigh Commerce Park, Greenfold Way, Leigh, Lancashire, WN7 3XH. England, U.K