



OPERATING INSTRUCTIONS

Rhythm AM/FM Rechargeable Radio



MODEL: N2408

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Wavebands: FM or AM
- RMS Output: 1.2w
- Built-in rechargeable Lithium-ion battery provides up to 8 hrs playtime
- Mains Operated: 220-240v 50/60Hz (cable supplied)
- Low power DC Adaptor Operated: 5v DC 1000mA (adaptor not supplied)
- Battery recharged using Mains or DC Adaptor



SPECIFICATIONS

Mains Power: AC 220/240v 50/60Hz

Alternative Power: DC 5v 1000mA

Internal Rechargeable Battery: Li-ion 18650 3.7v DC 1200mA battery

RMS Output power: 1.2W

Operating Temperature: +5°C to +35°C

Wavebands:

FM 88 - 108Mhz

MW 530 - 1600Khz

IMPORTANT SAFEGUARDS AND PRECAUTIONS

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN		 This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit
CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER, NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL			 This symbol indicates that there are important operating and maintenance instructions in the literature accompanying unit

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only.
- Only for use indoors.

DO NOT

Do not use in wet or damp conditions.

- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.

DO NOT

Do not use for any purposes other than the appliances intended use.

DO NOT

Do not use if any part of this appliance is damaged in any way.



- To prevent possible hearing damage, do not listen at high volume levels for long periods.

- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and user maintenance shall not be made by children.
- Never let children push anything into holes or slots in the cabinet or casing – this could result in an electric shock.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Always unplug when not in use.
- Should you find the sensitivity or quality of sound deteriorating, replace the Li-ion 18650 battery with new one as soon as possible.
- DON'T throw the battery in fire or dispose of in household waste. Consult your local authority in the correct way to dispose of unwanted batteries.
- DON'T short-circuit the supply terminals of the batteries.
- Always check the correct polarity when inserting batteries. Incorrect polarity can damage this unit.

POWERING THE RADIO

There are several methods to power this radio:

- a) Internal rechargeable Lithium-Ion battery (recharged using Mains Figure-8 cord or DC Adaptor), will last approx. 8 hours from full charge.
- b) 220-240v Main Supply (using figure-8 cord supplied)
- c) 5v DC 1000mA DC Adaptor (not supplied)

CHARGING THE INTERNAL BATTERY

The internal rechargeable lithium battery is charged by using either the Mains Voltage Supply or DC Adaptor. The red charging LED will illuminate during the charging process.

Note: LED does not advise when battery is fully charged.

MAINS POWER

Plug the figure-8 power cord into the AC Input and then plug the UK plug into a suitable 220-240v~50Hz mains supply.

Or use a 5v DC Adaptor with a minimum of 1000mA rating into the DC socket at side of the radio.

LISTENING SAFETY

To protect your hearing, follow these guidelines when using earphones:

- Set the volume to the lowest setting before you begin listening and then then adjust the volume to a comfortable level
- Do not listen at extremely high volume levels. Extended periods of listening at high volumes can lead to permanent hearing loss.
- Once the volume is set to a comfortable level, do not increase it. Over time, your ears adapt to the volume level, so even a volume that does not cause discomfort may still damage your hearing.

ANTENNA

This radio is equipped with a built in ferrite bar aerial for improved AM (MW) reception and a telescopic rod antenna for improved FM reception. As the built in ferrite bar aerial is directional, rotate the radio slowly to find the position, which gives optimum reception on AM (MW). When listening to FM broadcasts, extend the telescopic rod aerial to its full length, for best reception and clarity.

RADIO OPERATION


1. Ensure the radio is connected to a power source as stated above.
2. Move Slide Switch to choose the desired waveband FM or AM.
3. Rotate the OFF/Volume switch down to increase the volume to desired level. A click will be heard when the radio comes out of OFF mode.
4. Rotate the TUNER knob left and right to select the desired radio station on the selected waveband. For FM reception, use the dipole antenna fully extended to receive best reception. For AM reception, the radio must be rotated to find the best reception. This waveband does not use the dipole antenna.
5. To turn OFF the radio, rotate upwards the OFF/Volume control until a click sound is heard.

INTERNAL BATTERY REMOVAL

The internal rechargeable battery can be replaced by another Li-ion 18650 battery. At end of life, the battery must be removed and taken to your local battery disposal centre.

1. Remove any power source.
2. Remove the battery cover at the rear of the radio.
3. Locate the battery and remove from the radio.

FITTING A NEW UK PLUG

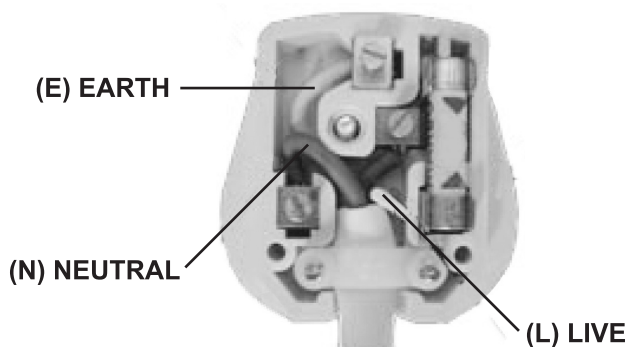


Your appliance operates on 220-240V~50Hz AC Mains and comes fitted with a 3-pin BSI Approved plug, so that it is ready for use for the UK or Eire market. If for any reason you need to fit a new plug, the flexible mains lead must be connected as shown below: -

■ IMPORTANT:

The wires in the mains lead are coloured in accordance with the following code:

BLUE:	NEUTRAL (N)
BROWN:	LIVE (L)
GREEN AND YELLOW:	EARTH (E)

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
The GREEN AND YELLOW wire must be connected to the terminal which is marked with the letter "E", the symbol  or coloured GREEN.

■ DO NOT CONNECT EITHER WIRE 'L' OR 'N' TO THE EARTH TERMINAL OF A 3-PIN PLUG

Always ensure that the Mains Cord is located into the Plug through the Cord Guard or Cable Clamp, and that the Cord Guard screws are tightened to clamp the Cord (outer sheath and inner coloured wires) in position in the Plug. Make sure the Plug top is also fitted securely.

The supply cord cannot be replaced. If the supply cord is damaged, the appliance should be scrapped.

This appliance must be protected by a 3 Amp fuse in a 13 Amp type (BS1363) plug. Should you need to replace the fuse, use only an ASTA approved BS1362 fuse.

CLEANING AND CARE

This radio has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

The exterior surface of the radio should be wiped with a clean dry cloth only.

DO NOT

Do not use abrasive cleaners, solvents or polish on any part of the appliance.

WEEE/ENVIROMENTAL PROTECTION



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Lloytron products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, D02 AY86