



OPERATING INSTRUCTIONS

Vintage Rechargeable Radio



BEFORE USE REMOVE SAFETY PLUG

Remove the black plastic plug which is inserted into the mains power connection at the rear of the radio.

This is used to isolate the internal battery during transportation.

The radio will not operate with this plug inserted.

Keep the plug if you wish to store the radio for long periods of time to help conserve the internal battery.

MODEL: N6403

thank you

Thank you for the purchase of this quality **LLOYTRON** product. Used carefully and in accordance with the instructions enclosed, it should give you trouble free service over a long period of time. Please keep these instructions for future reference.

FEATURES

- Wavebands: FM or AM
- Stream music from a phone or music provider APP's
- MP3 music playback using USB or MicroSD card
- Full music streaming and MP3 control allows playback, pause, next song, previous song
- RMS Output: 1.2w
- Built-in rechargeable Lithium-ion battery provides up to 8 hrs playtime
- Alternative Battery Source: 2x D sized batteries (not supplied)
- Mains Operated: 220-240v 50/60Hz (cable supplied)
- Low power DC Adaptor Operated: 5v DC 1000mA (adaptor not supplied)
- Battery recharged using Mains or DC Adaptor

SPECIFICATIONS

Rated Input:	220-240V ~ 50Hz 1.5W
Alternative Power Source:	DC 5v 1000mA
Battery Alternative:	3v DC 2x D/UM-1 size Alkaline Batteries
Battery:	Lithium Ion 18650 3.7V 1200mAh 4.44Wh
Cable Length:	1m approximately, USB-A to USB-C
Waveband Frequency:	FM: 88-108Mhz AM: 530 – 1600KHz
RMS Output:	1.2W
Dimensions:	19.5 x 7.5 x 12cm (approx.)
USB/Micro SD Card Format:	FAT 32 or exFAT / Maximum 64Gb
Music Format:	MP3
Operating Temperature:	+5°c to +30°c



IMPORTANT SAFEGUARDS AND PRECAUTIONS

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN		 This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit
CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER, NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL			 This symbol indicates that there are important operating and maintenance instructions in the literature accompanying unit

SAVE THESE INSTRUCTIONS

- Read all instructions carefully
- For Household Use only.
- Only for use indoors.

DO NOT

Do not use in wet or damp conditions.

- Keep away from hot surfaces, such as gas or electric hobs and ovens etc.

DO NOT

Do not use for any purposes other than the appliances intended use.

DO NOT

Do not use if any part of this appliance is damaged in any way.



- To prevent possible hearing damage, do not listen at high volume levels for long periods.

- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- Cleaning and user maintenance shall not be made by children.
- Never let children push anything into holes or slots in the cabinet or casing – this could result in an electric shock.
- Before plugging into mains socket, check whether supply line voltage and current rating are in compliance with the rated electrical parameters shown on the rating label.
- To prevent damage to the mains cord, do not let it pass over sharp corners, edges or hot surfaces.
- If the supply cord is damaged, do not use. Check before each use!
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Always unplug when not in use.

DO NOT

Do not use NiMH rechargeable or Carbon Zinc batteries in this appliance.



DO NOT

Do not mix old and new batteries, different types of batteries – they may leak.

- Always turn the unit off, when not in use. Leaving it on will shorten the life of the batteries.
- If you plan not to use the unit for a length of time, remove the alkaline batteries. Old batteries can leak and cause corrosion, damaging the unit.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible.
- The use of long life alkaline batteries is recommended.
- DON'T throw the battery in fire or dispose of in household waste. Consult your local authority in the correct way to dispose of unwanted batteries.
- DON'T short-circuit the supply terminals of the batteries.
- Always check the correct polarity when inserting batteries. Incorrect polarity can damage this unit.

POWERING THE RADIO

There are several methods to power this radio:

- a) Internal rechargeable Lithium-Ion battery (recharged using Mains Figure-8 cord or DC Adaptor), will last approx. 8 hours from full charge for USB/Micro SD.
- b) Internal battery compartment, requiring 2x D size Alkaline batteries (Do not use rechargeable NiMH or Carbon Zinc batteries)
- c) 220-240v Main Supply (using figure-8 cord supplied)
- d) 5v DC 1000mA DC Adaptor (not supplied)

CHARGING THE INTERNAL BATTERY

When the internal battery becomes low, you will hear a message that says “**LOW BATTERY, PLEASE CHARGE**”. It is time to recharge the battery or use an alternative power source.

The internal rechargeable lithium battery is charged by using the mains cable, a USB power adaptor or USB Power Wall Socket. The red charging LED will illuminate during the charging process.

Note: LED does not advise when battery is fully charged.

MAINS POWER

Plug the figure-8 power cord into the AC Input and then plug the UK plug into a suitable 220-240v~50Hz mains supply.

Or use a 5v DC Adaptor with a minimum of 1000mA rating into the DC socket at side of the radio.



BATTERY OPERATION

1. Remove the battery compartment door.
2. Insert 2 x 1.5 'D' batteries (Not Included) , observing the correct polarities as indicated in the battery compartment.
3. Replace the battery compartment door, ensuring that it clicks securely into place.

IMPORTANT

- Always turn the unit off when not in use. Leaving it on will shorten the life of the batteries
- If you plan not to use the unit for a length of time, remove the batteries. Old batteries can leak and cause corrosion and damage the unit.
- Should you find the sensitivity or quality of sound deteriorating, replace all old batteries with new ones as soon as possible
- The use of long life alkaline batteries is recommended.

USB POWER

Plug the USB Cord supplied into a 5v DC Adaptor with a minimum of 1000mA rating.

IMPORTANT

Always turn the unit off when not in use. Leaving it on will shorten the life of the batteries

LISTENING SAFETY

To protect your hearing, follow these guidelines when using earphones:

- Set the volume to the lowest setting before you begin listening and then then adjust the volume to a comfortable level
- Do not listen at extremely high volume levels. Extended periods of listening at high volumes can lead to permanent hearing loss.
- Once the volume is set to a comfortable level, do not increase it. Over time, your ears adapt to the volume level, so even a volume that does not cause discomfort may still damage your hearing.

ANTENNA

This radio is equipped with a built in ferrite bar aerial for improved AM (MW) reception and a telescopic rod antenna for improved FM reception. As the built in ferrite bar aerial is directional, rotate the radio slowly to find the position, which gives optimum reception on AM (MW). When listening to FM broadcasts, extend the telescopic rod aerial to its full length, for best reception and clarity.



RADIO OPERATION

1. Ensure the radio is connected to a power source as stated above.
2. Move Slide Switch to choose the desired waveband FM or AM.
3. Rotate the OFF/Volume switch down to increase the volume to desired level. A click will be heard when the radio comes out of OFF mode.
4. Rotate the TUNER knob left and right to select the desired radio station on the selected waveband. For FM reception, use the dipole antenna fully extended to receive best reception. For AM/MW reception, the radio must be rotated to find the best reception. This waveband does not use the dipole antenna.
5. To turn OFF the radio, rotate upwards the OFF/Volume control until a click sound is heard.

USB OR MICRO SD CARD MP3 MUSIC MODE

This radio plays MP3 format music files from USB memory sticks, or Micro SD/TF cards that have been formatted in FAT32 or exFAT and contain the music files in the root directory in MP3 format.

1. Ensure the radio is connected to a power source as stated above.
2. Move Slide Switch to select BT/MP3.
3. Insert the USB or micro SD Card in FAT32 format containing the music files in MP3 format. The red MP3 Player LED will illuminate and remain static. This will flash slowly during music playback.
4. Rotate the OFF/Volume switch down to increase the volume to desired level. A click will be heard when the radio comes out of OFF mode and a voice will say “**USB MODE**” or “**TF CARD MODE**” depending on which device is connected.
5. The buttons on top of the radio are used to change, pause and play the desired track.
 - I<< Previous Track
 - >II Play or Pause the current Track
 - >>I Next Track
 - M Mode to switch between USB/SD and Music Stream™ operation
6. To turn OFF the radio, rotate upwards the OFF/Volume control until a click sound is heard.

MUSICSTREAM™

This radio plays music files by MusicStream™ (is BT compatible) source such as Mobile Phone. This can be music streaming sources such as Spotify, Apple Music, Deezer etc or music stored directly on your phone.



1. Ensure the radio is connected to a power source as stated above.
2. Move Slide Switch to select BT/MP3.
3. Do not insert a USB or micro SD card. Alternatively, if these are already inserted press M to change the mode.
4. Rotate the OFF/Volume switch down to increase the volume to desired level. A click will be heard when the radio comes out of OFF mode and a voice will say **"PAIRING"** or if you have already paired before it will say **"YOUR DEVICE IS PAIRED"**.
5. To connect to **MusicStream™** for the first time, the radio will say **"PAIRING"** and is waiting to connect to your phone. The red MP3 Player LED will flash fast. On your phone, search for Bluetooth devices for a device called N6403 and click CONNECT. There is no password.
6. Once paired, the radio will say **"YOUR DEVICE IS PAIRED"**, the red MP3 player LED will remain static, and you are ready to play your music on your phone.
7. The buttons on top of the radio are used to change, pause and play the desired track.
 - I<< Previous Track
 - >II Play or Pause the current Track
 - >>I Next Track
 - M Mode to switch between USB/SD and **MusicStream™** operation
8. To turn OFF the radio, rotate upwards the OFF/Volume control until a click sound is heard.

INTERNAL BATTERY REMOVAL

The internal rechargeable battery is not replaceable. At end of life, the battery must be removed and taken to your local battery disposal centre.

1. Remove any power source including any alkaline batteries.
2. Remove the screws holding the case together and pry open the case.
3. Locate the battery and remove from the radio.

Note: *it is extremely important that you do not detach both wires at the same time using scissors, as this could short the battery, resulting in personal injury or damage to the battery.*



CLEANING AND CARE

This radio has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

The exterior surface of the radio should be wiped with a clean dry cloth only.

DO NOT

Do not use abrasive cleaners, solvents or polish on any part of the appliance.

WEEE/ENVIRONMENTAL PROTECTION



■ PRODUCT END OF LIFE AND BATTERY DISPOSAL

The battery contains substances that may pollute the environment. At end of life for the product, always remove the battery and separate before you discard the product at your local waste collection point. Both battery and product should be disposed separately.

If you have trouble removing the battery, then you should contact a qualified technician or authorised service centre.

Contact your local authority for details and locations of official waste collection points. Do not dispose of batteries or product with normal household waste.



■ DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment.

LLOYTRON® CUSTOMER SERVICES

If you have any queries about this product then please contact Lloytron Customer Services online at:



www.lloytronhelpdesk.com

To find out more about Lloytron products, visit www.lloytron.com



Distributed in UK by Lloytron Ltd, Laltex House, Leigh, England WN7 3XH
Distributed in Europe by Laltex Ireland Ltd, Dublin 2, Eire. D02 AY86